



**Read Instruction manual**

### Troubleshooting

If your compressor is not working, check the following:

- a. The cigarette lighter socket fuse is not damaged (15amp).
- b. The plug adaptor is pushed in firmly.

If your spot light does not work, check the following:

- a. The "LIGHT" switch has clicked into position correctly.
- b. The light bulb is securely inserted and the filament is undamaged (Dia. 3).

210mm

# HOMEBASE

## 5 in 1 Air Compressor



### GUARANTEE

This product is guaranteed for domestic use for a period of 12 months against faulty manufacture or materials. This guarantee does not affect the statutory rights of the consumer. In the event of any problem occurring please contact our Helpline at the number above for advice. This product is not guaranteed for HIRE purposes.

*If faults cannot be remedied, contact the Helpline on 020 8391 6767*

**Helpline@hika.co.uk**

**Manufactured On behalf of Home Retail Group**

489 - 499 Avebury Boulevard,  
Central Milton Keynes,  
MK9 2NW

### Environmental Protection



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



715530 - Issue 1 - R.W. 14-08-09

 
148mm

## Safety Instructions

Read these instructions carefully before using the product

- It is recommended in the interests of your safety that you check your tyres with a BS tyre gauge to ensure your tyres are at the correct pressure.
- Do not over inflate your tyres or any other inflatable object.
- Do not leave the compressor unattended.
- Ensure you are safely positioned away from traffic if you have to inflate a tyre on a road.
- Keep your face a safe distance away from the compressor and the object being inflated - do not get too close.
- This compressor is intended for short run use. Maximum uninterrupted running time should not exceed 15 minutes and a 15 minute cooling down period is recommended before running the compressor again.
- Keep out of reach of children.
- CAUTION: Bursting items can cause injury so do not exceed recommended pressure levels. The cigarette lighter socket should be fused with a 15 amp fuse.
- It is advisable to check the vehicle manufacturers recommended tyre pressures to ensure correct inflation levels (Keep this information with you in the car).

## Features

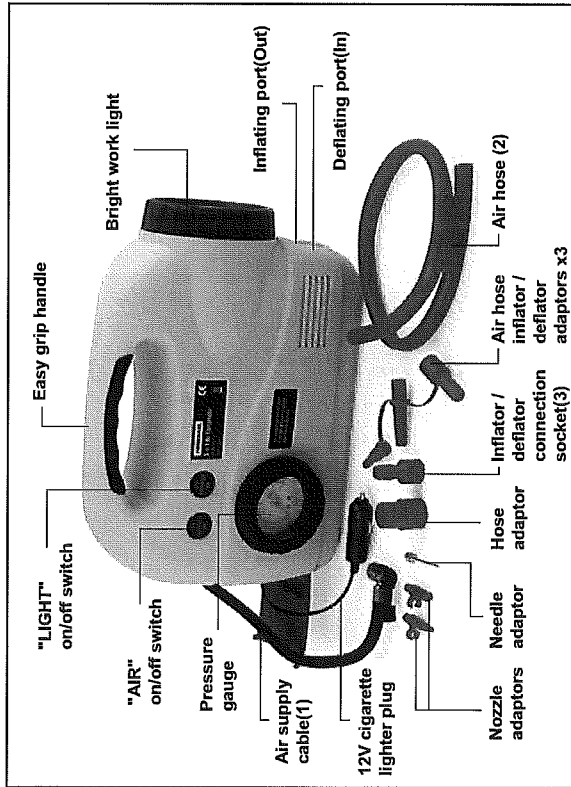

Dia.6

210mm

## Using your 5-in-1 Air Compressor

### Preparation for use:

Before plugging in the unit ensure the "AIR" switch is in the "OFF" position. If the unit does not function, check power connection is secure.

**NOTE:** Your car ignition may need to be set to position "I" for the 12V output from the cigarette lighter socket to function. Furthermore, it is recommended that your car engine is running when using this product so that your car battery is not depleted and full power is supplied to the unit. Always check that the car is in neutral and the handbrake is on. This compressor is designed for use with a car 12V DC power supply, do not connect to any other type of electrical power.

### Power connection:

Open the storage compartment in the back of the compressor (see Dia. 1). Pull out the air supply cable and the power plug cord/DC cigarette lighter plug. Plug the cord into the 12V DC cigarette lighter socket.

**NOTE:** Ensure the "AIR" switch is in the "OFF" position.

### 1) Using the Compressor:

 
 
Attach the air supply cable (item 1, Dia.6) securely to the valve on the tyre, or other item to be inflated (use adaptors if necessary). Set the pressure gauge on the compressor to the required PSI by turning dial until the needle aligns with appropriate pressure (see Dia.4).

Press "AIR" switch to the "ON" position, the compressor will start.

The compressor will inflate the tyre (or other item) to the pre-set pressure and when reached the compressor will automatically stop and shut off.

Press "AIR" switch to the "OFF" position and disconnect the air supply cable from the valve.

**NOTE:** Use a pencil gauge, or equivalent, to check the tyre pressure.

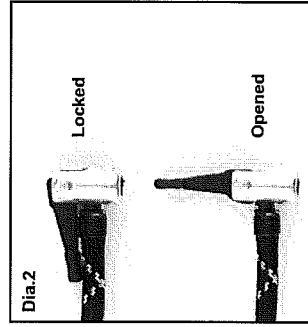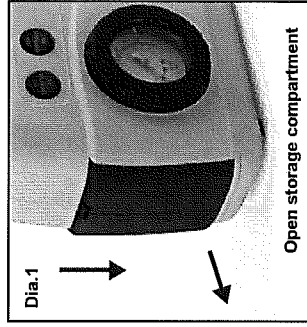

## 2) Auto Cut-Off:

### IMPORTANT!

If the tyre is already at a higher pressure than that set on the gauge the compressor will not start (see Dia. 4). NEVER rotate gauge dial during operation.

Always double check air pressures using an accurate pressure gauge.

 
## 3) Inflating:

**NOTE:** Auto cut-off does not function with this feature.


Fit the connector socket (item 3, Dia. 6) to the end of the red hose then onto the inflating port on the front of the unit marked "OUT" (see Dia.5).

Attach the appropriate adaptor to the other end of the red hose and ensure that it is securely fitted. Plug the power cord into a 12V DC cigarette lighter socket. Press "AIR" switch to the "ON" position, the compressor will now start. CAREFULLY watch the operation and ensure that you do not over inflate the item. When the item is sufficiently inflated, press the "AIR" switch to the "OFF" position. Remove the adaptor from the item.

**NOTE:** Air will still escape from the air supply cable at the same time, this is normal. Do not try to stop this.

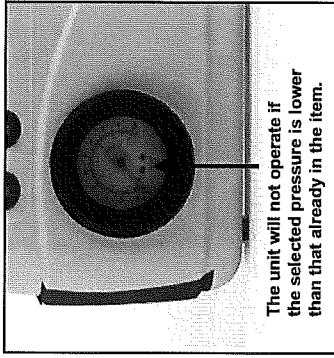

Dia.4

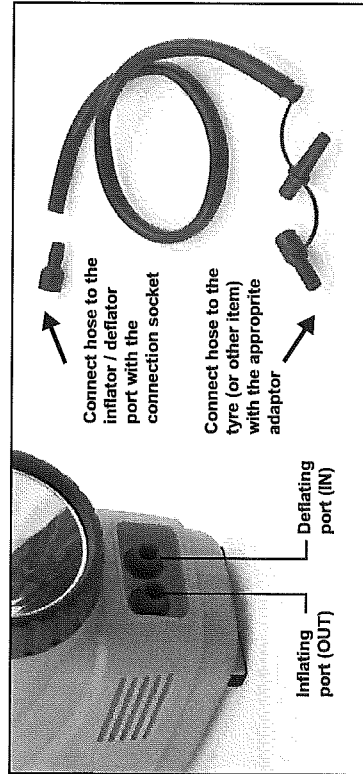 

Dia.5

## 4) Deflating:

Fit the connector socket (item 3, Dia. 6) to the end of the red hose (item 2, Dia. 6) then onto the deflating port on the front of the unit marked "IN" (see Dia.5). Attach the appropriate adaptor to the red hose and ensure that it is securely fitted.

**Note:** Many items have a one-way valve fitted, the selected adaptor should open this valve allowing air to escape.

Press the air switch to "ON" position, the compressor will now start.

When the item is sufficiently deflated press the "AIR" switch to the "OFF" position. Remove the adaptor from the item.

### IMPORTANT!

Prevent hose from kinking.

Do not cover or obstruct the outlet and inlet of the inflator/deflator.

## 5) Lighting Operation:

Turn the light switch to "ON" for spot light operation.

 
## 6) Replacing the light bulb:

Ensure that the compressor is switched OFF and the power cord is removed from the 12V DC cigarette lighter socket before replacing the light bulb. Remove the work light cover ring by turning anti-clockwise (Dia.3).

Remove the damaged light bulb from the bulb holder and replace it with a new light bulb.

Replace the light bulb cover ring back onto the compressor by turning clockwise.

To test the light bulb is functioning correctly plug the power cord into a 12V DC cigarette socket and press the light switch to "ON" position.

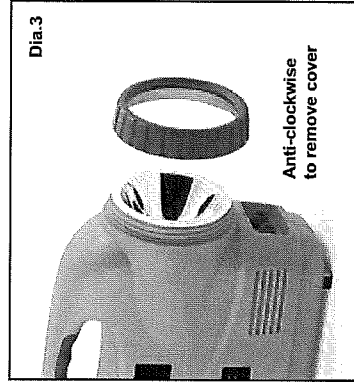

Dia.3