

10 Watt Glue Gun

Model:- FL-138



Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist.



Check with your local authority or retailer for recycling advice.

SAFETY & OPERATING INSTRUCTIONS

Please retain these instructions for future use and referral.

READ THESE INSTRUCTIONS IN FULL BEFORE ATTEMPTING TO USE THE HOT GLUE GUN AND RETAIN FOR FUTURE USE.

Safety

Warning: Do not leave the glue gun switched on for more than 15 minutes without dispensing glue, failure to comply with this could result in the glue stick becoming soft and lead to the gun becoming inoperative.

- Check the equipment for visible damage prior to use.

This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the machine by a person responsible for their safety. Children should be supervised to ensure that they do not play with this equipment.

- Do not direct glue jet towards people.
- Prior to cleaning, always unplug the equipment from the mains power and allow to cool down to a practical handling temperature.
- Never allow the hot nozzle into contact with the mains cable.
- Do not inhale vapour escaping from the glue.
- If the hot glue comes in contact with your skin, immediately cool it down with cold running water, and seek medical advice .
- If hot glue is stuck to your skin, consult your doctor immediately.
- Never work without protective gloves & glasses.
- Do not lay the glue gun on its side, always use the stand provided.
- Do not overcharge the gun with glue.
- Only operate the gun when it has reached its working temperature which is roughly 6 minutes after switching it on.
- Do not use it in overhead positions .
- Do not hold the nozzle upwards.
- Do not use the gun if the case has become damaged due to breakage, shock or heavy wear.

Before storing away always allow the gun to fully cool down first.

Operating Instructions

1. Insert a glue stick into the back of the glue gun. If the glue gun already has a glue stick in the chamber keep a second one in reserve nearby.
2. Plug the glue gun into an electrical outlet. Make sure that it is placed in a secure place and away from flammable items. As the glue gun heats up a little bit of hot glue might drip from the end. Do not leave the gun on a wooden table, carpet or any item that may become damaged by heat from any glue drips.
3. Gather the materials you want to glue together. Hot glue works exceptionally well on thick fabrics, wood and plastics. Since it leaves a thicker residue, it is not the best choice for thin papers, fabrics and ceramics.
4. Check to see if the glue in the gun has melted by squeezing the trigger slightly and touching the tip to a test piece of paper. If the glue comes out easily, the glue gun has heated up fully. If the trigger is hard to pull, wait a minute more for the gun to heat more completely.
5. Pick up the glue gun and squeeze the trigger slightly while you draw a thin line on one side of the item to be glued.
6. Immediately place the other object to be glued on the glue line, pressing firmly together for about 15 seconds or until the glue has hardened.
7. Test to see if the items hold together when removing the pressure.

Contents

1 X 10 Watt glue gun
10 x assorted glitter glue sticks

Technical specification

Supply: ----- 230v ~ 50 Hz
Power rating: ----- 10 Watt
Fuse rating : ----- 3 amp
Product weight: ----- 0.2kg

Plug Fitting

Note:: if a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

If the supply cord is damaged it must only be replaced by a qualified person. If you should need to fit a new plug follow the instructions below. If in doubt consult a qualified electrician.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:


Blue - Neutral Brown - Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with N.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L.

No connection is to be made to the earth terminal of the plug. If a 13 AMP (BS 1363/A) plug is used, a 3 AMP fuse must be fitted, either in the plug, or adaptor or on the distribution board.

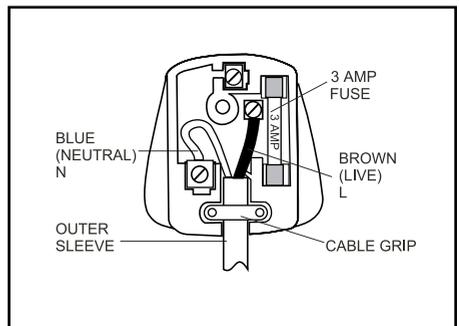



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not intended in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

*If faults cannot be remedied, contact the **Helpline on 020 8391 6767***

Helpline@hilka.co.uk

GUARANTEE

This product is guaranteed for domestic use for a period of 12 months against faulty manufacture or materials. This guarantee does not affect the statutory rights of the consumer. In the event of any problem occurring please contact our Helpline at the number above for advice. This product is not guaranteed for **HIRE** purposes.

Home Retail Group
489 - 499 Avebury Boulevard,
Central Milton Keynes,
MK9 2NW