

# RAC

---

## 5 Drawer Mechanics Tool Chest & Cabinet

RAC-HP085



If faults cannot be remedied, contact the **Helpline** on **020 8391 6767**  
**helpline@hilka.co.uk**


### **GUARANTEE**

This product is guaranteed for domestic use for a period of 12 months against faulty manufacture or materials. This guarantee does not affect the statutory rights of the consumer. If in the event of any problem occurring please contact our Helpline at the number above for advice. This product is not guaranteed for **HIRE** purposes.


**Manufactured under license by Hilka Pro Imports**

**1 ROEBUCK PLACE, ROEBUCK ROAD, CHESSINGTON, SURREY KT9 1EU**


- 1** The tool chest is stored inside the cabinet section for transit purposes. Unscrew the base from the cabinet to remove the tool chest

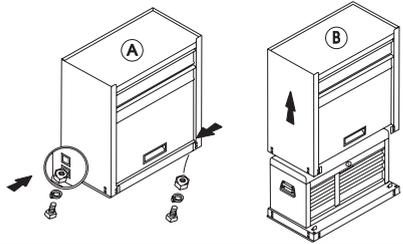


- 2** Remove the cabinet base from the tool chest

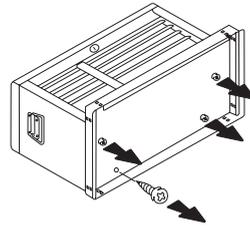

- 3** BASE AND CASTOR ASSEMBLY

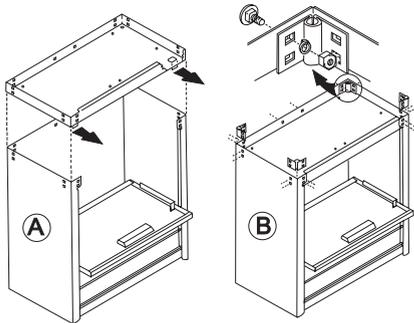

Carefully lay the cabinet on its top and refit base.

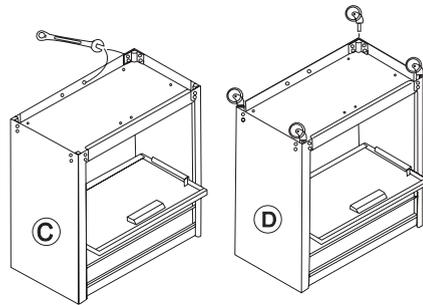


Fit the castor brackets to the base of the cabinet with nuts & bolts supplied. Then insert castors (Tools not included for assembly).

- 4** DRAWER REMOVAL


- Pull the drawer all the way open, then push it back to align the slide stop with opening.
- Push the slide stop in with a screwdriver as shown until the slide stop clears the drawer glide.
- Repeat (b) for the other side and remove the drawer.

To reinstall drawer  
Prise out the slide stop (approx. 1/4"), and slide the drawer channels back onto the glides.  
Firmly push drawer in until it reaches the closed position.

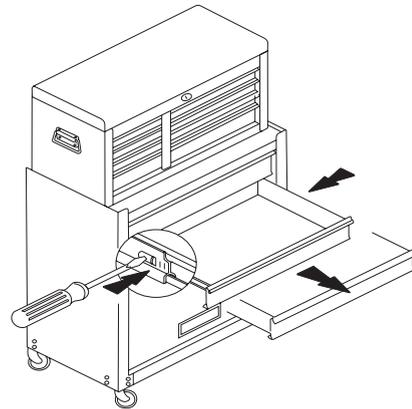

PARTS NO.	DESCRIPTION	QUANTITY
<b>Tool chest components</b>		
1.	LID	1 PC
2.	LID SUPPORT	1 PC
3.	SIDE HANDLE	2PCS
4.	SMALL DRAWER	2PCS
5.	LARGE DRAWER	1 PC
6.	LOCK & BAR	1PC
7.	LOCK & KEY	1 SET
8.	PLASTIC DRAWER PULL	3 PCS
<b>Cabinet components</b>		
9.	FRICITION SLIDE	4 PCS
10.	CASTOR PACK	1 PACK
11.	DRAWER	2 PC
12.	PLASTIC DRAWER PULL	2 PC
13.	PLASTIC HANDLE	1 PCS

## Components

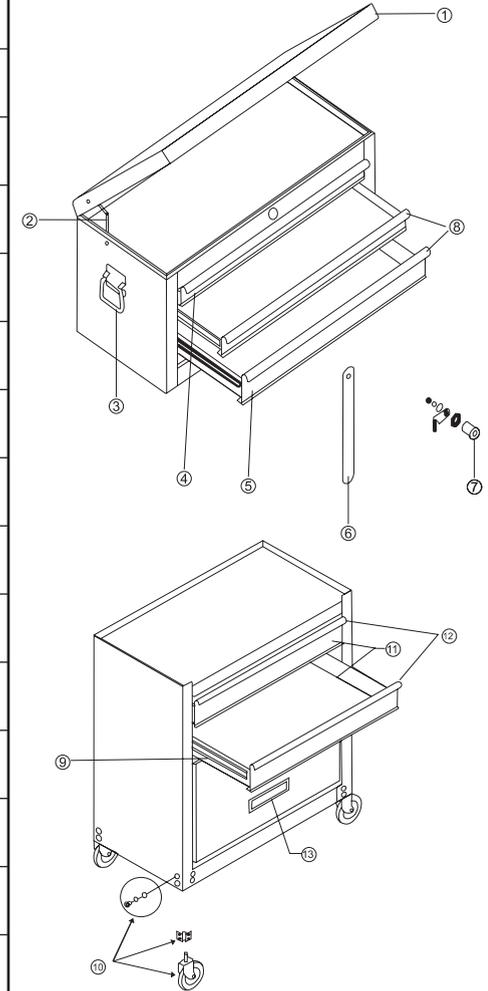

### MAINTENANCE

Drawer slides and castors should be lubricated periodically with general purpose oil. Check all screws, nuts and bolts periodically for tightness to maintain trouble free operation.

### Safety Instructions

When moving the tool cabinet, ensure all drawers are closed for safety reasons.  
Lock the castor when in position to stop unwanted movement during use.  
Open one drawer at a time to avoid any possibility of tipping.