


# **challenge<sup>®</sup>**

## **Digital Home Safe**

THIS MANUAL CONTAINS IMPORTANT INFORMATION REGARDING THE  
OPERATION AND MAINTENANCE OF THE SAFE  
COMPLETELY READ AND UNDERSTAND THE MANUAL BEFORE SECURING ITEMS IN THE SAFE  
**SAVE THIS MANUAL FOR FUTURE REFERENCE**

MODELS: T-43ELC

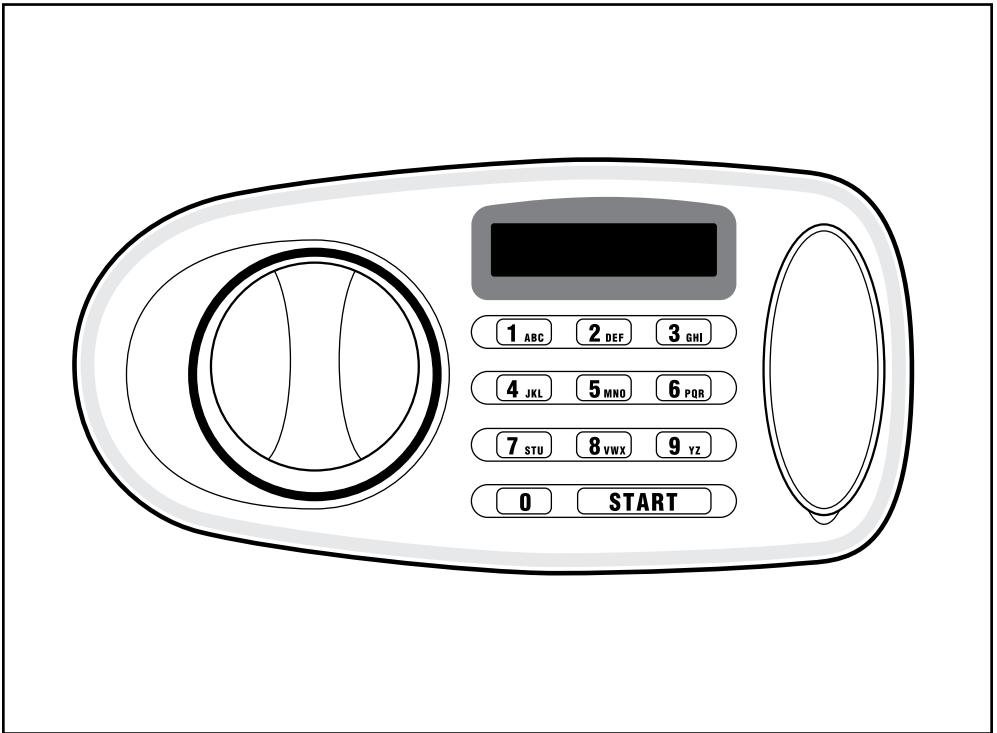


NEVER LOCK YOUR SPARE OVERRIDE KEYS OR THE INSTRUCTION MANUAL IN THE SAFE.  
ONCE THE BATTERIES DEplete, YOU WILL NEED TO USE THE KEYS TO OPEN THE SAFE.  
SPARE KEYS ARE UNAVAILABLE!



Always Read the Instruction Manual



# SAFE DIAGRAM

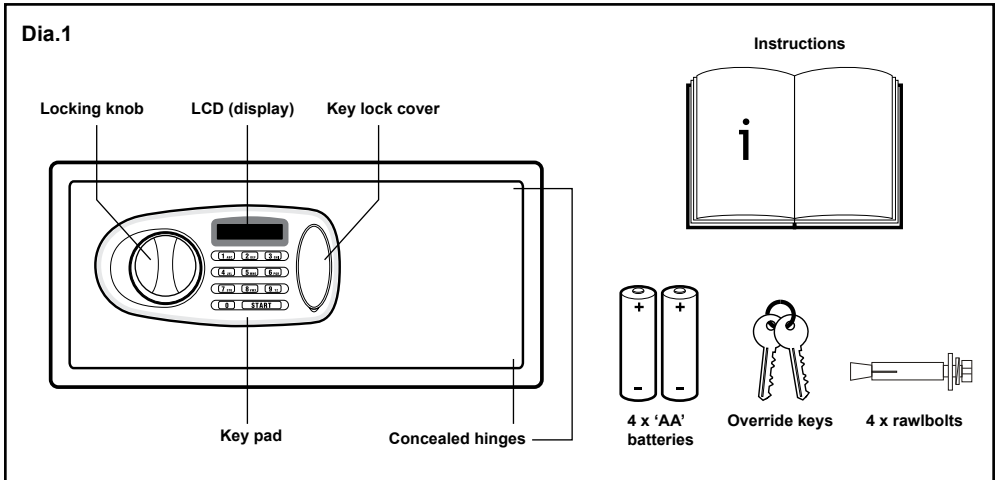

**NOTE:** This safe is NOT fire proof.

**NOTE:** This safe has no cash rating.

## CONTENTS

- 1 X Instruction book
- 2 X Manual override keys
- 1 X Internal mat
- 4 X 'AA' Batteries
- 4 X Rawlbolts

## SPECIFICATION

	T-43ELC
SIZE :	43 (w) x 35 (h) x 20 (d) Cm
NET WEIGHT:	11.25Kgs
POWER SUPPLY:	4x 'AA' 1.5V Batteries
INTERNAL VOLUME:	30.19 Litre

## IMPORTANT INFORMATION

This safe can be programmed with two sets of codes, User and Master. After opening the safe and installing the batteries you should change the USER and MASTER PINS, from the factories pre-set codes, for security reasons. You could give the user code to a guest while maintaining the master code.

## OPERATING THE SAFE FOR THE FIRST TIME

Use the Manual override key to open the safe.

- Remove the plastic key lock cover (dia 1)
- Insert the override key; turn it anti-clockwise, at the same time turn the locking knob clockwise and pull open the safe.
- See **BATTERY REPLACEMENT**
- Keep the safe door open until you have set the PIN code.

## LCD DISPLAY

- To hide the numbers from being displayed when entered, Press "START" twice before entering you're PIN. "-" will be displayed instead of the number.

## PROGRAMMING YOUR USER PIN NUMBER *(personal identification number)*


### DEFAULT FACTORY USER PIN: 0000

Each time a button is pressed, a beep will be heard. This is a safety feature so that you will know when the safe is being accessed and cannot be switched off.

Keep PIN Codes in a safe place.

Do not use personal information like birthdays, telephone numbers etc.

- Write down your PIN number so you do not forget it. (any combination of numbers from 3 to 8 digits)
- With the door open, remove the security cap by unscrewing it, (dia.2).
- Depress the red reset button located at the back of the door.
- The LCD screen displays "SEt-CodE"
- You now have 20 seconds to enter your PIN.
- Enter your PIN code. You can enter 3-8 numbers.
- Press "START" button
- "In" will be displayed on the LCD screen and two beeps will be heard
- You PIN has now been set.
- Screw the security cap back onto the red reset button. Ensure you do this for security reasons.

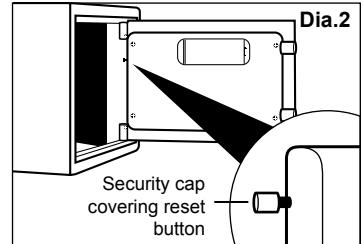

While the door is open familiarise yourself with the door opening procedure, and leave the door open until you are satisfied that you fully understand the opening and closing method. You can re-set the PIN at any time by following the above procedure.

## PROGRAMMING YOUR MASTER PIN NUMBER *(personal identification number)*


### DEFAULT FACTORY MASTER PIN: 8888

Each time a button is pressed, a beep will be heard. This is a safety feature so that you will know when the safe is being accessed and cannot be switched off.

Keep PIN Codes in a safe place.

Do not use personal information like birthdays, telephone numbers etc.

- Write down your PIN number so you do not forget it. (any combination of numbers from 3 to 8 digits)
- With the door open, remove the security cap by unscrewing it, (dia.3).
- Depress the red reset button located at the back of the door.
- The LCD screen displays "SEt-CodE"
- Press "START" button
- The LCD screen displays "oLd-CodE"
- Enter the existing PIN (at first this will be the factory PIN)
- Press "START" button
- The LCD screen displays "SET"
- You now have 20 seconds to enter your PIN.
- Enter your new PIN code. You can enter 3-8 numbers.
- Press "START" button
- The LCD screen displays "rE-inPut"
- Re-Enter your new PIN code.
- Press "START" button

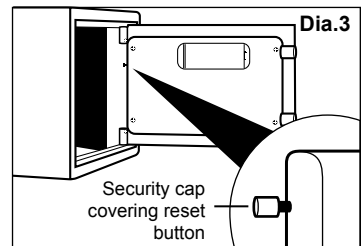

- “In” will be displayed on the LCD screen and two beeps will be heard
- You PIN has now been set.
- Screw the security cap back onto the red reset button. Ensure you do this for security reasons.

While the door is open familiarise yourself with the door opening procedure, and leave the door open until you are satisfied that you fully understand the opening and closing method. You can re-set the PIN at any time by following the above procedure.

### OPENING THE DOOR USING YOUR PIN NUMBER *(personal identification number)*

- Press “START”
- Enter your PIN number, (either the user or master PIN).
- Press “START”
- “OPEN” will be displayed on the LCD screen, three beeps will be heard and the lock will disengage.
- You now have 5 seconds to open the door before it will lock again.
- Open the safe door by turning the knob clockwise and pulling it open.

Note: If the safe door is not opened for more than 5 seconds after the correct PIN has been entered it will automatically re-lock.



#### Low Battery Power

If when pressing the “START” OR Reset button the “Lo-Bat” is shown up on the LCD screen, please change your batteries immediately.



If the wrong PIN is entered the display will show “Error” and the safe will not open. If the incorrect PIN is entered 4 times consecutively, the display will show “Error” and bleep every second until the door is opened with the override key and the red reset button pressed. The alarm will stop. Alternatively the alarm will stop after 3 minutes automatically.

### OPENING THE SAFE USING THE OVERRIDE KEY

Use the Manual override key to open the safe.



- Remove the plastic key lock cover (dia 6)
- Insert the override key; turn it anti-clockwise, at the same time turn the locking knob clockwise and pull open the safe.

### BATTERY REPLACEMENT

1. The digital safe uses four ‘AA’ type batteries (supplied).
  - Remove the battery cover on the rear of the door (dia 5). Push the catch in and pull out the cover.
  - Install the 4x ‘AA’ batteries supplied. Ensure correct polarity.
  - Replace the battery cover.
  - “o”s will be displayed on the LCD followed by “good”.
  - Keep the safe door open until you have set the PIN code.



The battery life is approximately one year. Make a note of the battery replacement date; they should last approximately one year. However, we recommend checking the batteries every 6 months just to make sure. If power is removed from the safe the set PIN code will be only remain in its memory for approximately 4 hrs then it will need re-setting.

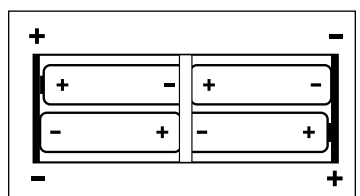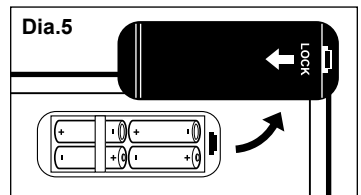

## SECURING YOUR SAFE



### ADVICE: WE STRONGLY RECOMMEND THAT YOU SECURE YOUR SAFE TO A WALL OR FLOOR FOR SECURITY REASONS.

You may wish to secure your safe to a fixed part of the house (i.e. stone wall or wooden beam).

This can be achieved by using 2 of the 4 rawl bolts supplied in the back of the safe or using the 4 rawl bolts in the base of the safe.

Use the holes in the safe to mark where you need to drill. Loosely attach the rawl bolts onto the safe with the nuts and washers provided. Hold the safe over the drilled holes and locate the rawl bolts into these holes (Dia 6). Tighten the nuts from the inside of the safe to secure firmly.

**Note :** The rawl bolts are packed inside the safe

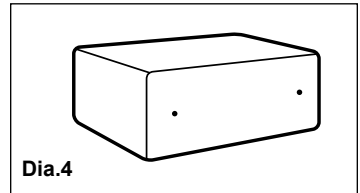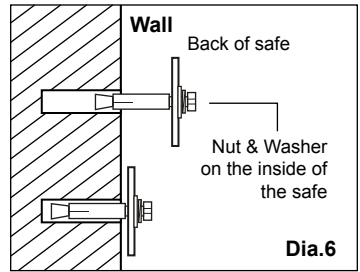

## TROUBLE SHOOTING

	<b>PROBLEM</b>	<b>CAUSE</b>	<b>SOLUTION</b>
1	Can I get a replacement key/ extra key?		Replacement keys are not available due to security reasons.
2	The keypad becomes inoperable	Low or depleted batteries	Use override keys and replace batteries.
3	My PIN works, however, the safe won't open	Low batteries. Will operate the keypad but not the lock relay.	Use override keys and replace batteries.
4	I have lost the keys and forgotten the PIN number, can I obtain spare keys.		If the safe cannot be opened properly then you will need to forcibly open it. Please contact our helpline for more information.
5	I am experiencing problems using the back up key; it is unable to slide smoothly into the keyhole.		Spray inside the keyhole with WD40, leave for a few minutes and then try again.
6	We recently changed the batteries in the safe, the safe has reset the code itself, and the code I've been using is no longer valid?	If the batteries are completely depleted for more than a day then the safe will not retain the code.	Try the factory default code 159 or use the override key; then refer to the user manual to reset your original code or to enter a new code.
7	When I press the "START" OR Reset button the "Lo-BAT" is shown up on the LCD screen.	The batteries are depleted.	Immediately replace the batteries.
8	The batteries I bought don't fit the safe?	Batteries can vary in size.	Try another brand.
9	When I use the override key, I can't open the door.		Ensure that you are tuning the key anti-clockwise, holding it in that position and then turn the locking knob clockwise to release the catch.



**Always read the  
instruction manual**



**WARNING!**

**NEVER LOCK YOUR SPARE OVERRIDE  
KEYS OR THE INSTRUCTION MANUAL  
INTO THE SAFE**

**SPARE KEYS ARE UNAVAILABLE**

HELPLINE Telephone Number 02083 916 767  
Alternatively check the Q&A on our website  
[www.hilka.co.uk/faq.php](http://www.hilka.co.uk/faq.php)

#### **HELPLINE**

In the unlikely event of a defect occurring please contact our Helpline.  
Office hours 9am – 4pm, Monday-Friday. Outside office hours or during peak times you will be  
directed to an  
answer phone. Please leave your name, a brief description of your enquiry and your number.  
One of our operators will contact you as soon as possible.  
Telephone Number 02083 916 767  
Alternatively check the Q&A on our website [www.hilka.co.uk/faq.php](http://www.hilka.co.uk/faq.php)

#### **NOTE:**

These important safeguards and instructions cannot cover all possible conditions and situations  
that may occur. It must be understood that common sense and caution are factors, which cannot  
be built into any product. These factors must be supplied by the person using this product.

**Manufactured on behalf of Home Retail Group**

**489 - 499 Avebury Boulevard,  
Central Milton Keynes,  
MK9 2NW**